

100

FIG. 1

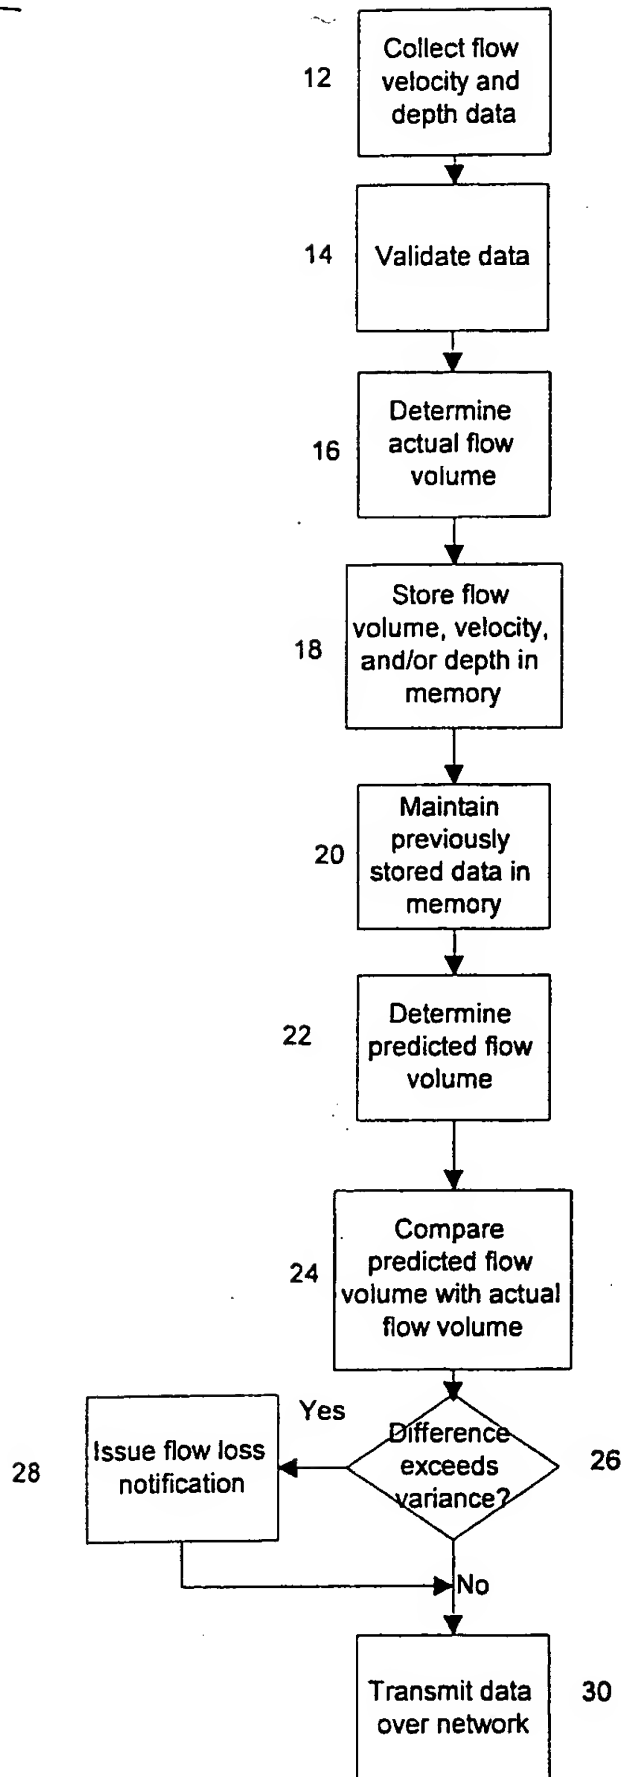


FIG. 2

# Flow Loss Detection

200

The meter "learns" the typical flow pattern for weekends and weekdays

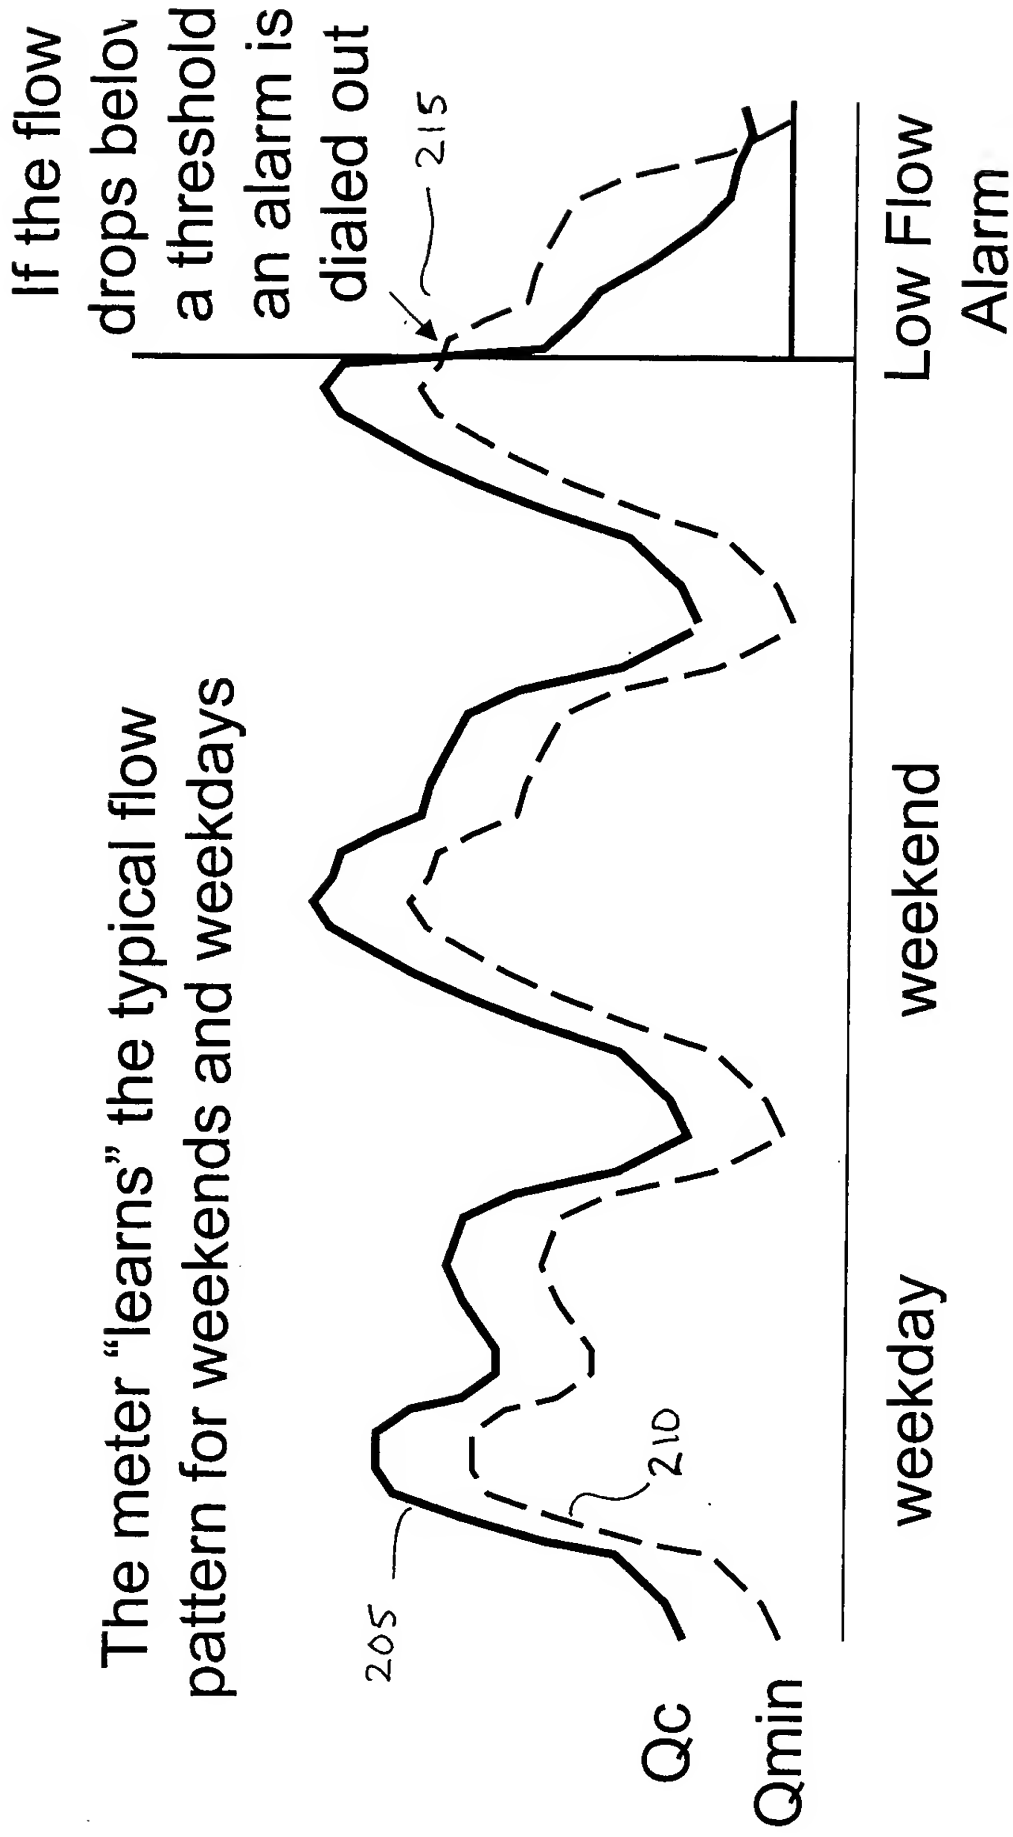




FIG. 4

# Pump Stations or Industrial Flows

Instead of lowering the % threshold, a moving boxcar average is applied to the flow data in the meter.


Erratic flow  
could cause  
false alarms



FIG. 5

500

515

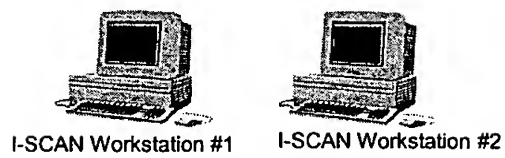


Municipal Wastewater existing office LAN



510

ADS Flow Monitoring Network

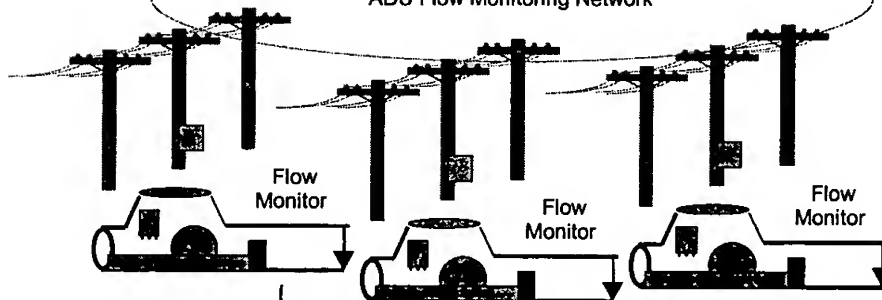


505

208050" 05626007

208050"05626007

600


FIG. 6

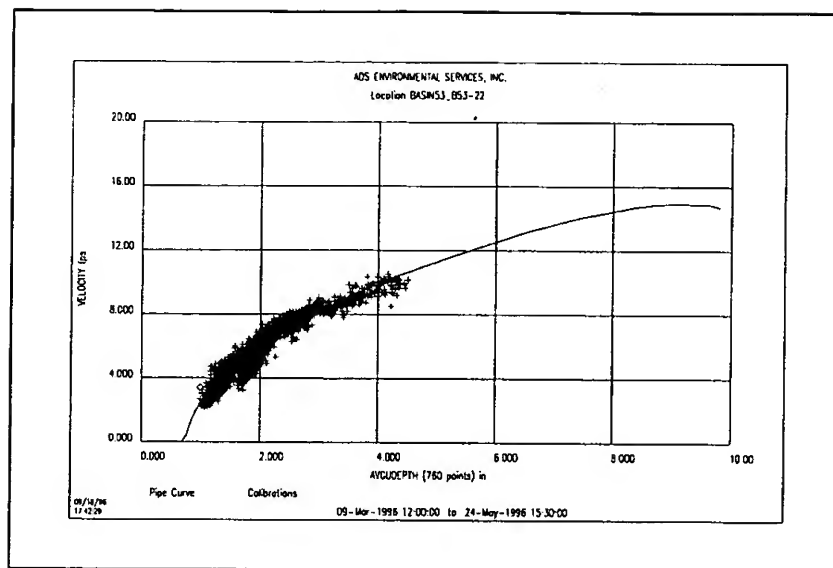

2030E0" 05626007

700

FIG. 7

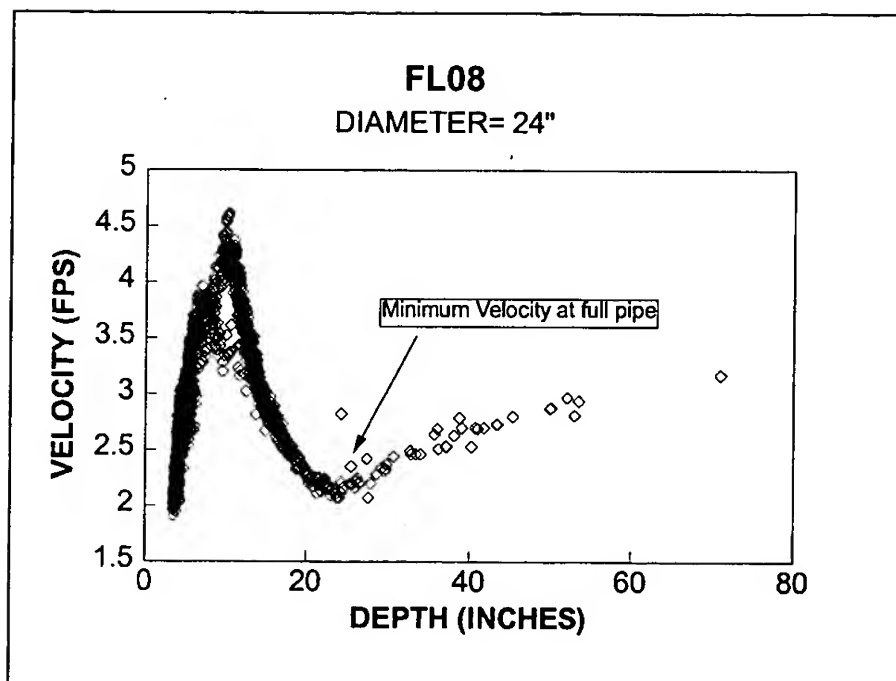

800

FIG. 8

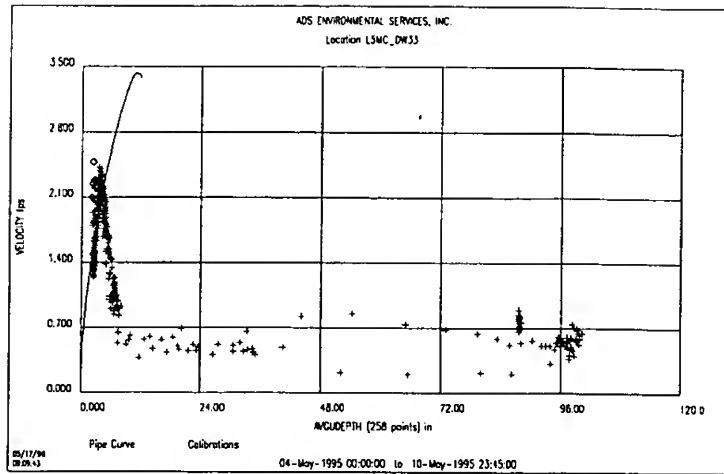




FIG. 9

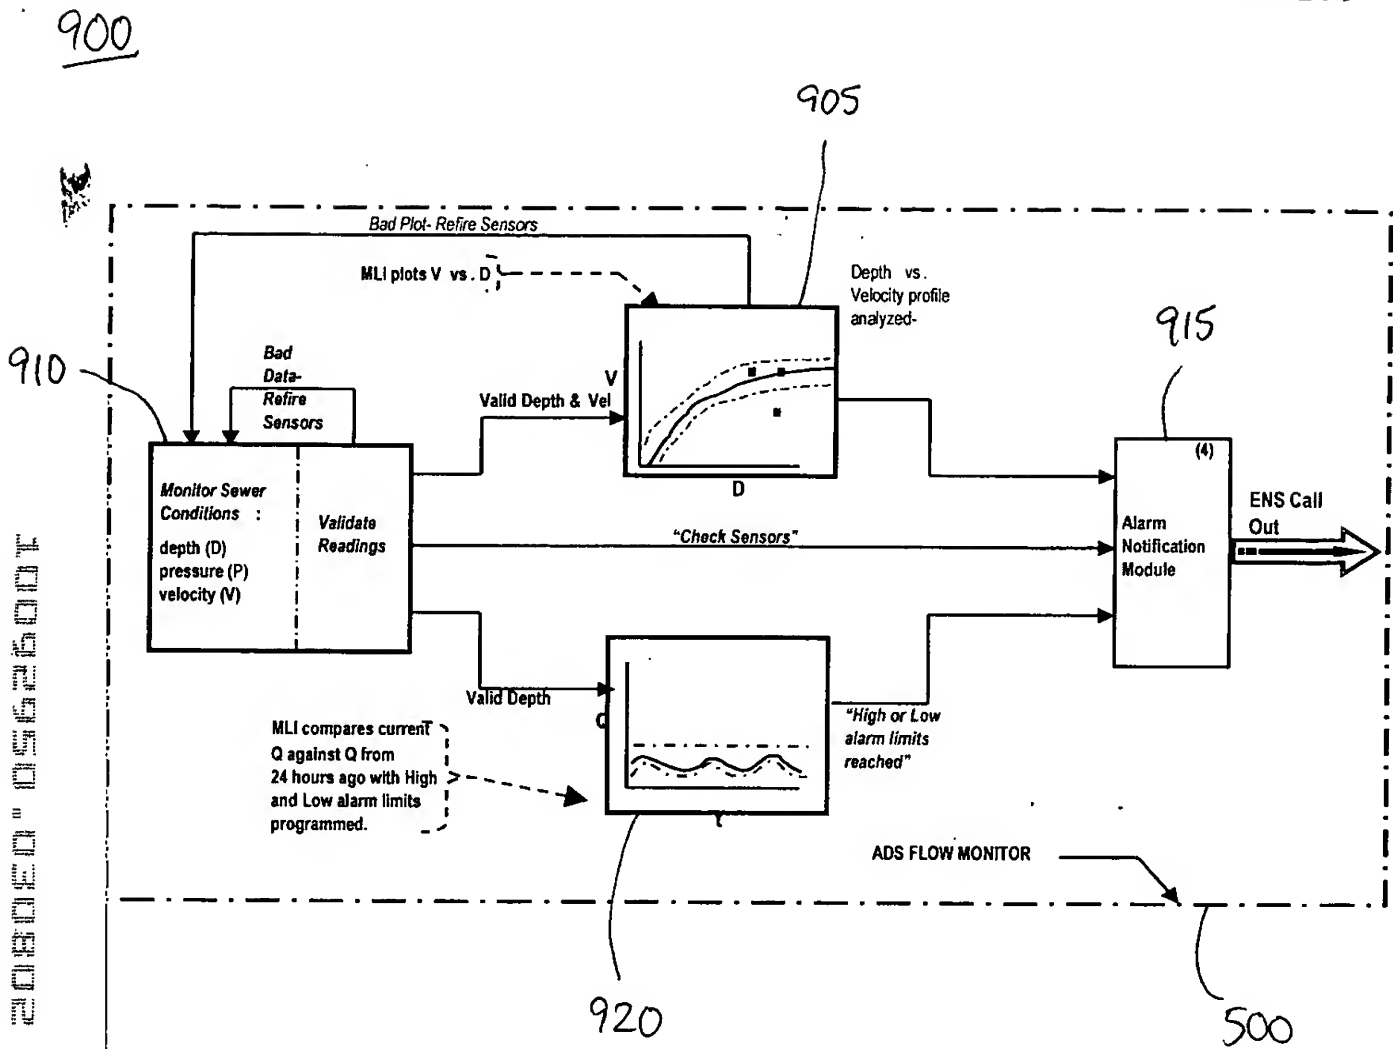


FIG. 10

20080301 09562600T

